


BED 2
S1001

North wall (west side)

allow for this fruss!

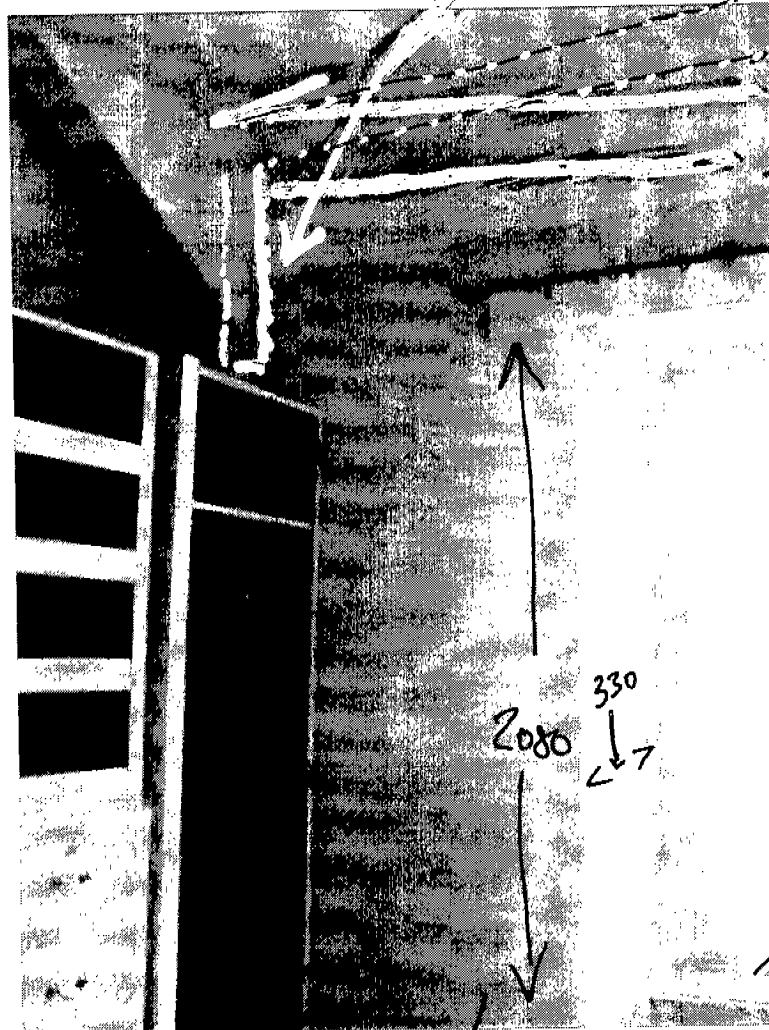

EXVES "COVERING"
take insulated under
as well.
picture rail
remove +
set aside
newstate after
curtain rail
support board
+ rail itself
+ newstate
afterwards

window due
to
replacement
**KEEP
BITS!**
→ shed @
back
on 'beds'


radi' pipes off skirting
skirting off

This wall will have
20mm (NOT 60) BA 'Reveal'
board on both
N. wall and reveals of
window
(unless window size
requires bigger reveals to
acomodate smaller window as
in ensuite. MUST BE CENTRAL!!!

Bed 2 EAST WALL @ North end

This window reveal 320 x 2070
 Wed! 97? check
 20mm 300mm...
 Wed x up to here

splash panel set aside for possible reuse (probably not)
 K17
 60mm Wedi

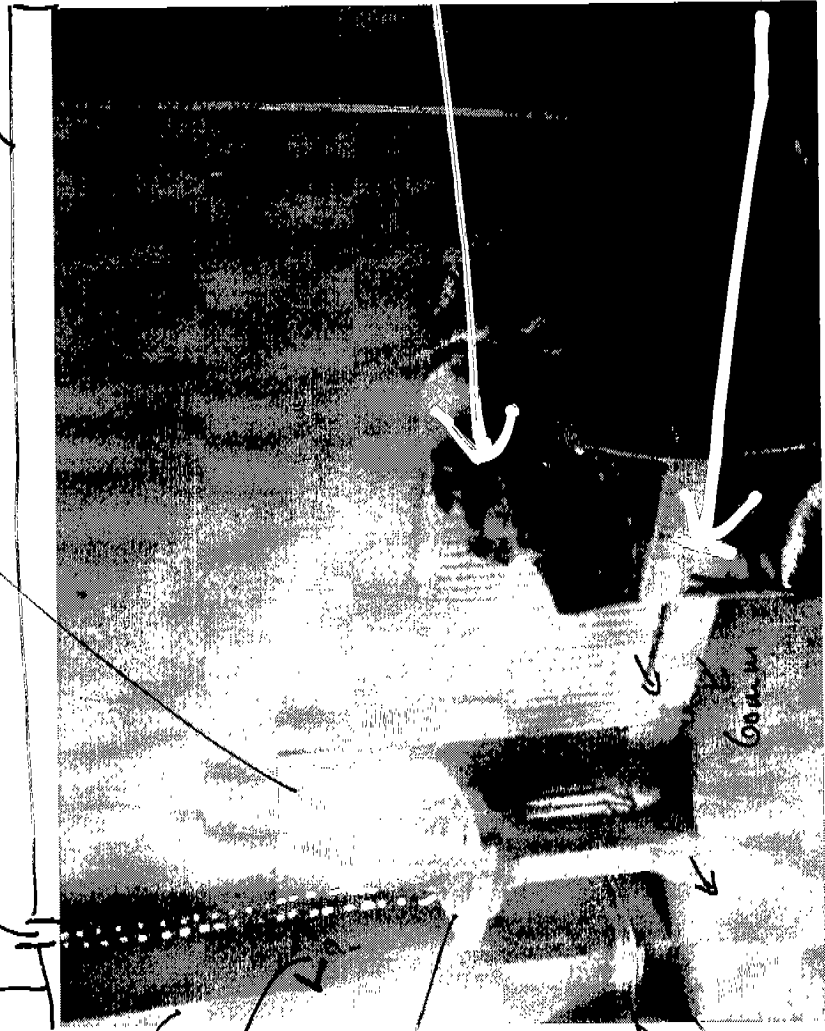

North wall on South elevation

Basin out to be put in

60mm further west

(due to be plumbed in to new Soil as part of contract)

discard rad. pipes

Set aside Radiator for later reinstatement after ~~Wedi~~ put on K17

skirting off east wall



See also ELEV N REAR (WD 2799/08) annotated

Carefully set aside skirting for later reuse
 NB. Plumber - when laying pipes in Joist void CUT to alternate joints on centre of joist NOT run skel saw down side of joists!

BED 2 SK 03

Bed 2 Front bay.

No access was possible to measure this so dimensions are taken as if for bay in Bed 3 which is, to all purposes, virtually identical.

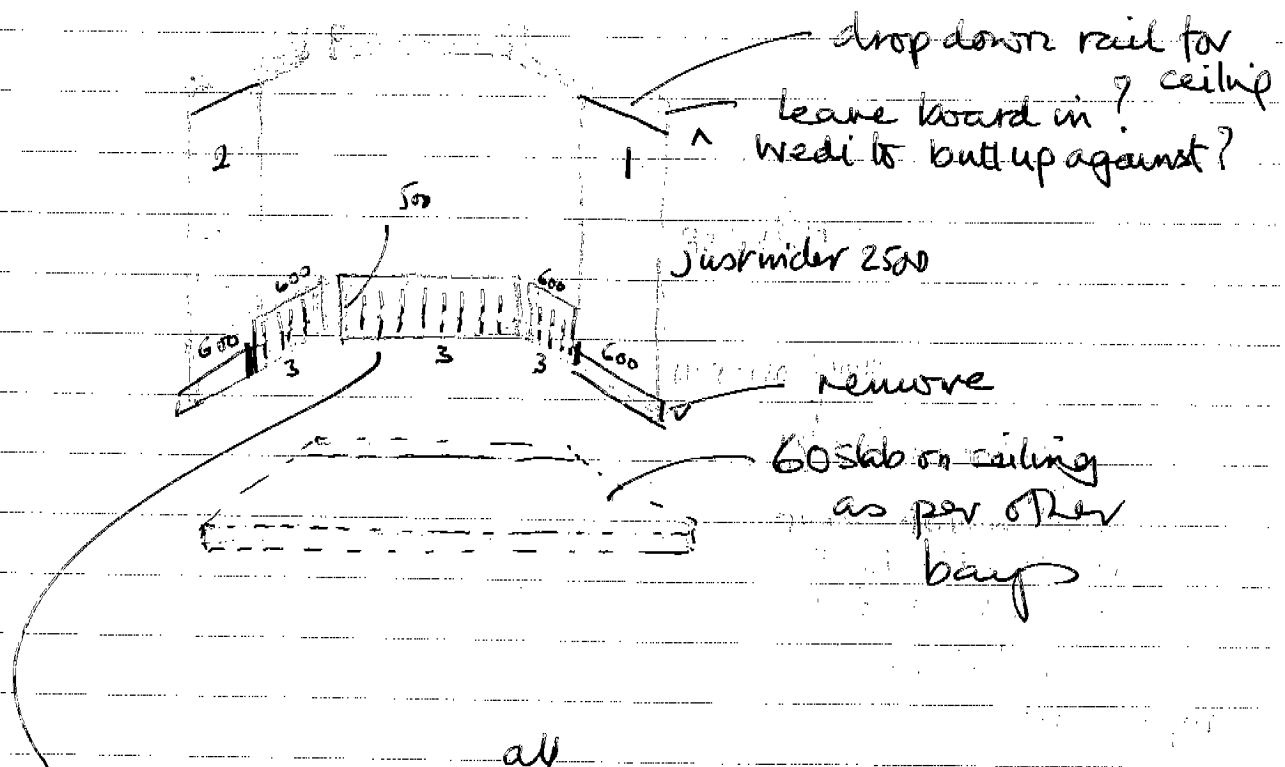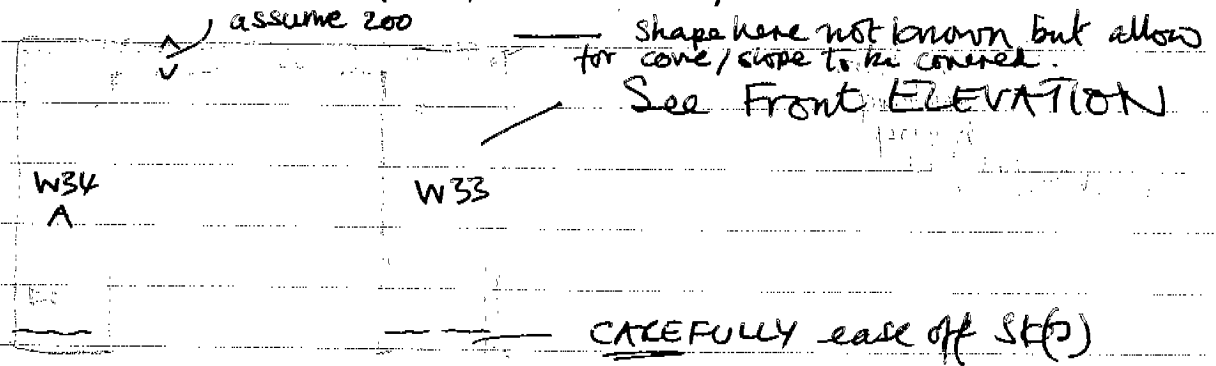

all
remove + set aside for re use

REV Brit. Gypsum
∴ Assume 3 - NO - BA 20 (less needed)
1 NO - BA 60 (will have some surplus)
K17 can be used for slope?