

BED3 SK 04
REVA

Bed 3 plain window
"High level"


See also FRONT ELEVATION

put sloping wedi
60 on ribs part
as well as in roof
workaround
truss

carefully take
picture
rail off
for re-installment
use off cut?

Splay is
360 x 2040

20mm
wedi
board

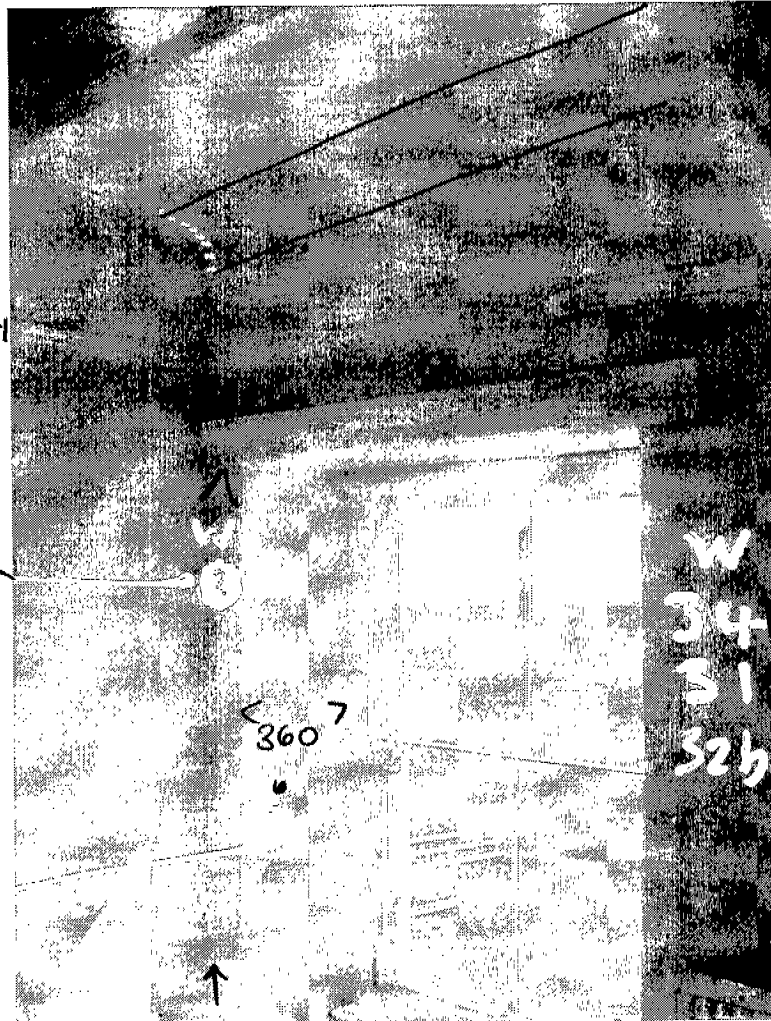

1- carefully remove
moulded picture
rail + reuse
ditto curtain board
" architrave head

BW3 and W4
(from front elev?)

For lower areas see ^{missing} other plan
photograph "Low level"

BED 3 SKOS

(Lower section of 'Plain' window)

600mm Wedi on splay

600mm Wedi on front wall.

watch out for slope on ceiling at top! + truss.

Carefully remove
nosing +
allow to be reinstated

all skirtings
carefully off



rad off +
discard.

'possible' insulation
under floor between
Jask + wall.

Plumber -


✓ Floor board removal
as per that described
for Bedroom 1

(staggered)
centre cut.

SK06

Bed 3 "Low level"
plain window

BA 20 on existing
reveals

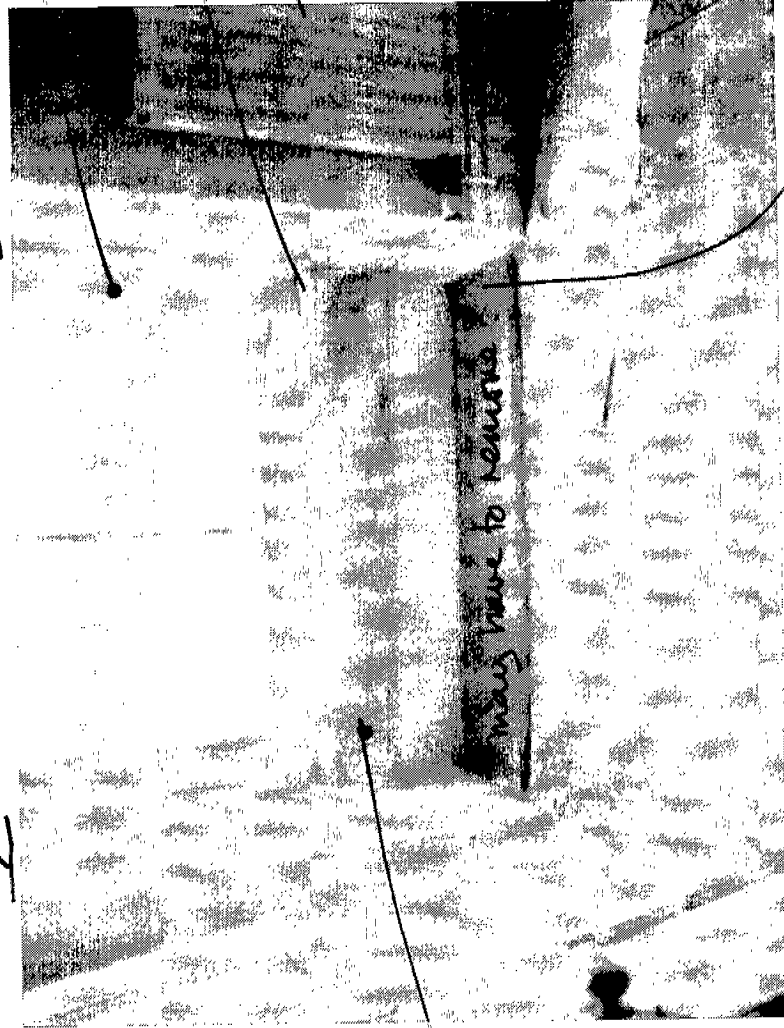

plaster is "blown"
+ needs to come off
completely -
allow for B&G
Wedi to go back
on to bondwork

CURTAINS TO MAKE A
DECISION TO REMOVE (OR NOT)
FRAME - depends on Tony's price.
Set aside (care
may be possible to remove or
"long term" / remove
- discarding radiator
(maybe for hall?)

remove + set aside
later remove all
skips) on front wall

allow for "floor board" to be
moved? (replaced?)

BED 3 SK07



This skirting has been taken off. Check site + keep if possible - i don't think moulded original skirting or use them as plasterer's "batten"