

SKGF Living Room BAY 'A' 'Reveal' ^{British Gypsum} ~~WED~~ Boarding

See "SK ~~WED~~ 09/06/07A" for dimensions 18 20 mm

Remove first and set aside, probably to be discarded later

(a) flat pelmet/curtain board on ceiling, vertical pelmet board on adjacent wall

(b) brackets


CAREFULLY remove (c) all architraves for later reuse, suitably labelling location

(d) remove + discard both sill nosings

BRICK UP AIR VENT

~~SK WED~~

~~09/06/07B~~

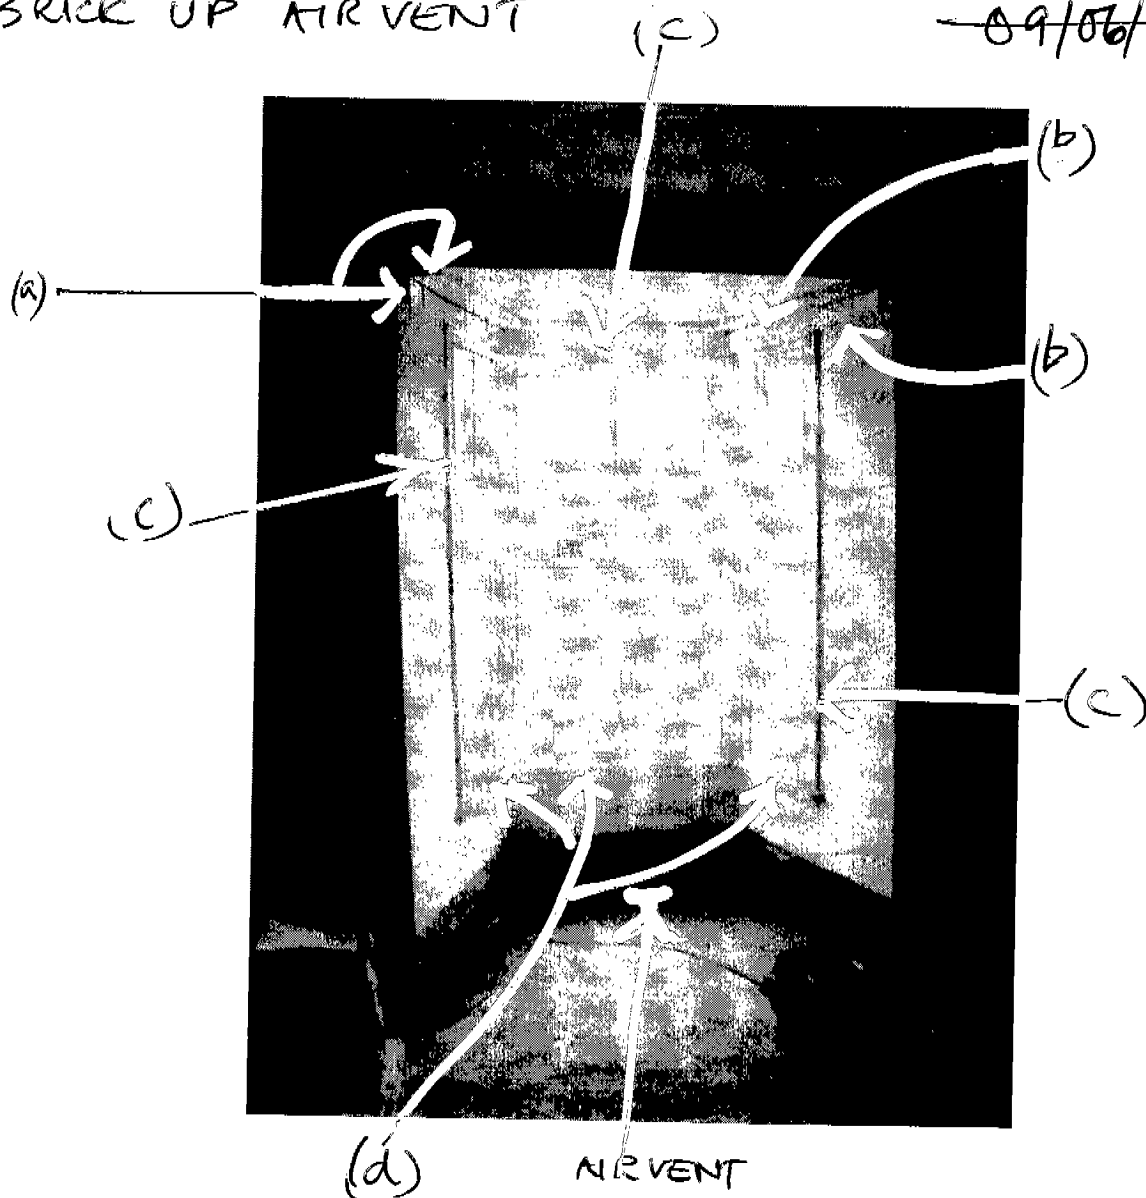

REINSTATE

^{before}

- 1) architraves on Wed after plastering exposed "edge" for decent finish where they abut windows
- 2) install new halfround nosing to fit + project-out, say 2" (look for a match elsewhere?) and "under" piece.
- 3) AFTER ceiling board is fitted instal similar upsidedown skirting to support curtain rail as in bay above in bedroom 3 of a suitable size + fixed through to masonry with long fixings where abutting wall. Glue with grippix (or whatever) as well.