

REVEAL BOARD

Read in conjunction with WEST ELEVATION

Preparation - Set aside for later reuse
1) metal strip

2) remove picture rail

3) fine place

4) 10mm wed on window sill

SK WEST WALL ALCOVE

BRITISH GYPSUM
REVEAL BOARD

1N° ~~WED~~ 20 B10


1N° ~~WED~~ 20 B10
1N° WED to suit plaster thickness next door to it
(? 20mm on dabs?)

2) Then gable wall


3) Then inset compensing

3.1) 2 785 x 300 @ top
in WB60 (N036)

3.2)

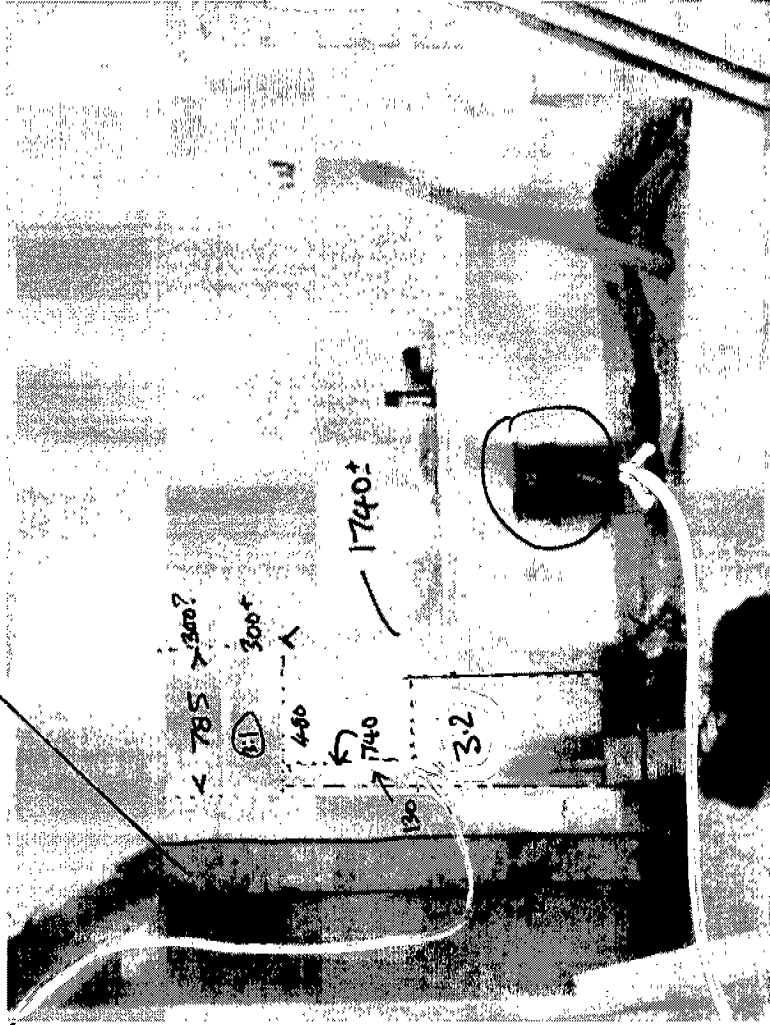

3.5) 10mm WED on window reveals

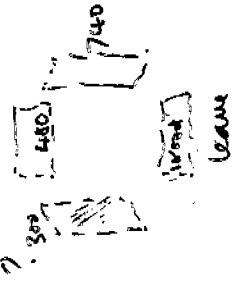

3.6) remove fine place
use off cuts of WED160
on surround (except @
top where plate to go?)

3.4 and 3.5 requires
2N° B10 boards
1N° BQ 'REVEAL' board

3.3) (N037) unless odd off
cuts can fit in (not
likely)

18mm "REVEAL" (B9)

3.4) 10mm WED on sides
and top of both
reveal to window
and alcove.

